



**METALCLOAK**

# INSTALLATION INSTRUCTIONS

PRODUCT:

**LED Flasher Relay**

REV: A | 06-10-10 |

**READ INSTRUCTIONS IN FULL BEFORE INSTALLATION.**

**QUESTIONS? CALL 916-631-8071 M-F 8:00 AM – 5:00 PM PST**

The MetalCloak experience includes the ease of installation of our products. We design for most contingencies, but installation may be different based dependent upon Jeep conditions, configurations and/or year.

We are continually trying to improve our products and instructions – please help us by providing feedback and pictures if you find any part of the instructions that do not match your particular Jeep or are not easily understandable.

If you have any difficulties at all, please give us a call. Thank you and enjoy your MetalCloak Products!

**IMPORTANT NOTE: We use Stainless Steel Hardware where possible. Therefore, a tube of Silver Anti-seize is provided and should be used on all bolts—only a small amount is needed.**


---

**WARRANTY INFORMATION:** This article is sold without warranty expressed or implied. No warranty or representation is made as to this products ability to protect the user from injury or death. The user assumes that risk. The effectiveness, warranty and longevity of this equipment are directly related to the manner in which it is INSTALLED, USED and/or MAINTAINED. THE USER ASSUMES ALL RISK. By purchasing this product and opening the packaging, purchasers expressly acknowledge, understand and agree that they take, select and purchase these MetalCloak products from Armored Works, LLC, its affiliates and distributors and agents as is and with all faults. The entire risk as to the quality and performance of these MetalCloak products is with the purchaser. Working on your vehicle can be a dangerous activity. If you are unsure of what you are doing, please leave mechanical or safety critical work to a skilled mechanic. We take no responsibility for the incorrect use and/or installation of MetalCloak products.

## Phase 1: Relay Installation

**Step 1:** Remove steering column housing to expose flasher relay.

Flasher Relay is located on steering column(A). To get to the relay you will need to remove the steering column clamshell housings by removing the 4 screws located on the bottom housing(B). You will need a Phillips screw driver for this step.

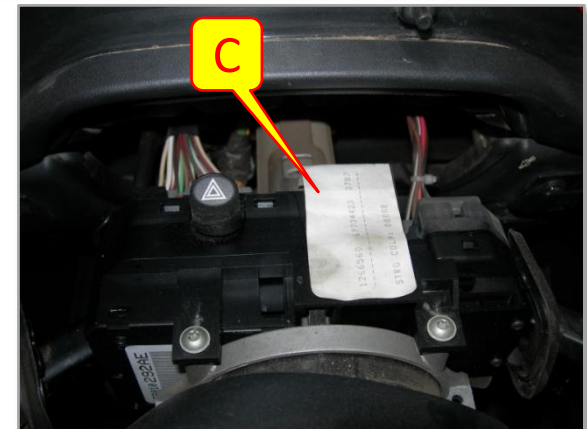

**Step 2:** Remove stock flasher relay, install LED flasher relay and replace steering column housing.

Once the housing is removed, you will see a sticker on the top of the steering column, the relay is located underneath the sticker(C, D).

Remove stock relay and replace with the LED Flasher Relay(E, F). Reposition steering column clamshell housings and replace 4 screws.

